



**MODEL 211**  
*AMG models only*

**Passenger cars Model Year 2006**  
USA

# Model 211



Customer: \_\_\_\_\_

Repair order number: \_\_\_\_\_

First visit at 1,000 - 3,000 miles

Performed YES  NO

**Tire Rotation**  
(non staggered width wheel setup only)  
Performed in accordance with the tire manufacturer's recommended intervals

Tires rotated YES  NO

**Tire Inspection**  
(staggered and non-staggered width wheel setup)  
Inspect tires for damage and correct tire inflation pressure

Tires inspected YES  NO

Current mileage reading: \_\_\_\_\_

Oil grade/viscosity: \_\_\_\_\_

Additional notes: \_\_\_\_\_


Service work to be performed as advised by service advisor:




Completion date:






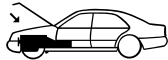


Confirm work has been performed by signing below:



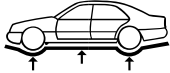








US Service 1-11 and 15-20 apply to "Additional work" items only.  
Vehicle determines need for US Service 12 (Engine oil and filter change) as well as US Service 13 or US Service 14  
Perform each service as described.

Completed <input checked="" type="checkbox"/>	Not OK
↓	↓
<b>US Service 1</b>	<b>not applicable</b>
<b>US Service 2</b>	<b>every 40,000 mi or 4 years:</b>
	<b>Engine compartment</b>
<input type="checkbox"/>	Replace engine air-cleaner insert
<input type="checkbox"/>	Replace compressor poly-V-belt
	AP13.22-P-1381R
<b>US Service 3</b>	<b>every 30,000 mi or 2 years:</b>
	<b>Engine compartment</b>
<input type="checkbox"/>	Replace combination filter
	AP83.00-P-8384T
<b>US Service 4</b>	<b>not applicable</b>
<b>US Service 5</b>	<b>every 60,000 mi or 5 years:</b>
	<b>Engine compartment</b>
<input type="checkbox"/>	Replace fuel filter
	AP47.20-P-0780TC
<b>US Service 6</b>	<b>not applicable</b>
<b>US Service 7</b>	<b>every 100,000 mi or 5 years:</b>
	<b>Engine compartment</b>
<input type="checkbox"/>	Replace spark plugs
	AP15.10-P-1580AB
<b>US Service 8</b>	<b>every 150,000 mi or 15 years:</b>
	<b>Engine compartment</b>
<input type="checkbox"/>	Replace coolant
	AP20.00-P-2080DA
<b>US Service 9</b>	<b>every 2 years:</b>
<input type="checkbox"/>	Check body for paint damage by service advisor
	<input type="checkbox"/> AP98.00-P-9850BA
	<b>Engine compartment</b>
<input type="checkbox"/>	Replace brake fluid Check preload pressure of pressure reservoir
	AP42.00-P-4281T
	<b>Underside of vehicle</b>
<input type="checkbox"/>	Chassis and load-bearing body components: Check for damage and corrosion by service advisor
	<input type="checkbox"/> AP00.20-P-0090BA
<b>US Service 10</b>	<b>every 5 years:</b>
	<b>Interior</b>
<input type="checkbox"/>	Tilt/sliding roof: Clean slide rails and slide shoes
	AP77.20-P-7731A
<b>US Service 11</b>	<b>every 3 years:</b>
	<b>Interior</b>
<input type="checkbox"/>	Panorama sliding roof: Clean and lubricate guide mechanism
	AP77.20-P-7732PB
<b>US Service 12</b>	<b>every 10,000 mi or 1 year:</b>
	<b>Engine compartment</b>
<input type="checkbox"/>	Engine oil and filter change
	AP18.00-P-0101R

US Service 13	first at 10,000 mi or 1 year; after first every 20,000 mi or 2 years																					
US Service 14	first at 20,000 mi or 2 years; after first every 20,000 mi or 2 years	Not OK																				
	<b>Engine compartment</b>																					
<input type="checkbox"/>	<input type="radio"/> <b>Leakage - Major components</b> Check for chafe marks, line routing, damaged components <b>i</b> In the event of leakage, determine cause and perform repair via separate work order	<input type="checkbox"/> AP00.20-P-0053BA																				
<input type="checkbox"/>	<input type="radio"/> Check auxiliary battery condition using "Midtronics MCR 717" Tester	<input type="checkbox"/> AP54.10-U-5453A																				
<input type="checkbox"/>	<input type="radio"/> Inspect poly-V-belt for damage	<input type="checkbox"/> AP13.22-P-1351Z																				
<input type="checkbox"/>	<input type="radio"/> Check catch, safety catch and hinges on engine hood for proper operation.  <b>Check fluid level, correct as required</b> <b>i</b> If there is a loss of fluid, determine cause and perform repair via separate work order	<input type="checkbox"/> AP88.40-P-8851T																				
<input type="checkbox"/>	<input type="radio"/> Brake system	<input type="checkbox"/> AP42.10-P-4210Z																				
<input type="checkbox"/>	<input type="radio"/> Power steering	<input type="checkbox"/> AP46.00-P-4611BB																				
<input type="checkbox"/>	<input type="radio"/> Windshield washer system (incl. summer/winter cleanser)	AP82.35-P-8210N																				
	<b>Interior</b>																					
<input type="checkbox"/>	<input type="radio"/> Reset service indicator in instrument cluster	AP00.20-P-0042TA																				
	<b>Function test</b>																					
<input type="checkbox"/>	<input type="radio"/> Warning/indicator lamps, illumination and interior lighting	<input type="checkbox"/>																				
<input type="checkbox"/>	<input type="radio"/> Check safety belts and buckles for signs of external damage and function	<input type="checkbox"/> AP91.40-P-9150M																				
<input type="checkbox"/>	<input type="radio"/> Check Sensotronic Brake Control (SBC) hydraulic unit	<input type="checkbox"/> AP42.50-P-4259A																				
<input type="checkbox"/>	<input type="radio"/> Windshield washer system, incl. rear window washer (where applicable)	<input type="checkbox"/> AP82.30-P-8252T																				
<input type="checkbox"/>	<input type="radio"/> Headlamp cleaning system	<input type="checkbox"/>																				
	<input type="radio"/> Check parking brake (function test only)	<input type="checkbox"/> AP42.00-P-4290R																				
	<b>Wheels, brakes</b>																					
<input type="checkbox"/>	<input type="checkbox"/> Check condition/thickness of front brake pads/discs (remove 1 front wheel)	<input type="checkbox"/> AP42.10-P-4251R																				
	<input type="radio"/> Check condition/thickness of brake pads/discs front/rear	<input type="checkbox"/> AP42.10-P-4251R																				
<input type="checkbox"/>	<input type="radio"/> Inspect tires for damage and splits, measure tread depth, enter in mm: <div style="margin-left: 40px;"> <table style="border: none;"> <tr> <td></td> <td style="text-align: center;">LF</td> <td style="text-align: center;">RF</td> <td style="text-align: center;">LR</td> <td style="text-align: center;">RR</td> </tr> <tr> <td>outside</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> </tr> <tr> <td>center</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> </tr> <tr> <td>inside</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">_____</td> </tr> </table> </div>		LF	RF	LR	RR	outside	_____	_____	_____	_____	center	_____	_____	_____	_____	inside	_____	_____	_____	_____	<input type="checkbox"/> AP40.10-P-4051Z
	LF	RF	LR	RR																		
outside	_____	_____	_____	_____																		
center	_____	_____	_____	_____																		
inside	_____	_____	_____	_____																		
<input type="checkbox"/>	<input type="radio"/> Correct tire inflation pressure	<input type="checkbox"/>																				

13 ↓	14 ↓		Not OK ↓
		<b>Underside of vehicle</b>	
	<input type="radio"/> <b>Leakage - Major components</b> Check for chafe marks, line routing, damaged components <input type="checkbox"/> <b>i</b> In the event of leakage, determine cause and perform repair via separate work order		<input type="checkbox"/> AP00.20-P-0053BA
	<input type="radio"/> Check front axle ball joints for play, check rubber boots		<input type="checkbox"/> AP33.20-P-3353BA
	<input type="radio"/> Inspect condition of flexible discs		<input type="checkbox"/> AP41.10-P-4152Z
	<input type="radio"/> Inspect play of tie rod and drag link joints, inspect rubber boots		<input type="checkbox"/> AP46.00-P-4653F
		<b>Trunk</b>	
<input type="checkbox"/>	<input type="radio"/> Check main battery condition using "Midtronics MCR 717" Tester		<input type="checkbox"/> AP54.10-U-5453A
<input type="checkbox"/>	<input type="radio"/> Correct spare tire inflation pressure (if applicable)		<input type="checkbox"/>
<input type="checkbox"/>	Check TIREFIT sealant expiration date (Wagons with third row seat only)		<input type="checkbox"/> AP40.10-P-4054R
		<b>Vehicle front/rear</b>	
<input type="checkbox"/>	<input type="radio"/> Check wiper blade condition		<input type="checkbox"/> AP82.30-P-8253G
<b>Completed</b> <input checked="" type="checkbox"/>			<b>Not OK</b> ↓
↓			
<b>US Service 15 - 19</b>		<b>not applicable</b>	
<b>US Service 20</b>		<b>once at 40,000 mi:</b>	
<b>Underside of vehicle</b>			
<input type="checkbox"/>	Automatic transmission - Oil and filter change		AP27.00-P-2702I
<b>Completed</b> <input checked="" type="checkbox"/>		<b>Perform:</b>	<b>Not OK</b> ↓
↓		↓	↓
<b>Vehicle over 150,000 mi:</b>			
<b>Check if all fluid levels and changes are updated</b>			
	<input type="checkbox"/> Transmission	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/> Rear axle	<input type="checkbox"/>	<input type="checkbox"/>
<b>Check if air, fuel, ventilation filters are updated</b>			
	<input type="checkbox"/> Engine air filter	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/> Fuel filter	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/> Combination filter	<input type="checkbox"/>	<input type="checkbox"/>

Completed <input checked="" type="checkbox"/>	Perform:	Yes	Not OK
	↓	↓	↓
<b>Check integrity of engine, mechanical components</b>			
 AP	<input type="checkbox"/> Perform compression test (hot and cold) Refer to BE01.00-Z-9999AZ	<input type="checkbox"/>	<input type="checkbox"/>
 AP	<input type="checkbox"/> Perform leak down test (hot and cold)	<input type="checkbox"/>	<input type="checkbox"/> AP00.20-P-0053BA
 AP	<input type="checkbox"/> Check spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
 AP	<input type="checkbox"/> Exhaust system hangers and leaks	<input type="checkbox"/>	<input type="checkbox"/>
<b>Check damaged / worn drivetrain parts</b>			
 AP	<input type="checkbox"/> Front wheel bearing play	<input type="checkbox"/>	<input type="checkbox"/>
 AP	<input type="checkbox"/> Rear wheel bearing play	<input type="checkbox"/>	<input type="checkbox"/>
 AP	<input type="checkbox"/> Axles joint play	<input type="checkbox"/>	<input type="checkbox"/>
 AP	<input type="checkbox"/> Flexible discs	<input type="checkbox"/>	<input type="checkbox"/>
 AP	<input type="checkbox"/> Tie rod and drag link joints	<input type="checkbox"/>	<input type="checkbox"/>